

Auxiliary Hydraulics


If It Didn't Come With It, We say add it!



Quick Instructions For Model 40 / John Deere 4X5 tractor Curl Lockout.



1. Apply hydro oil.
2. Screw into line on loader.
Tighten securely.

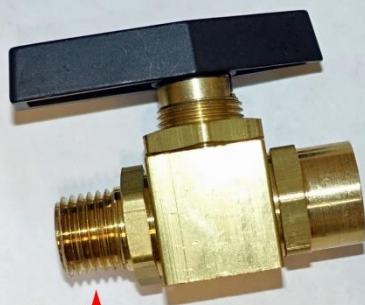

3. Apply PTFE paste.
4. Screw into adapter.
5. Orient for ease of use while tightening.



6. Apply PTFE paste.
7. Screw into valve.
8. Tighten Securely.

